


# ALTERNATOR MOUNT

**Small Block Chevy  
Short Water Pump  
Driver Side**

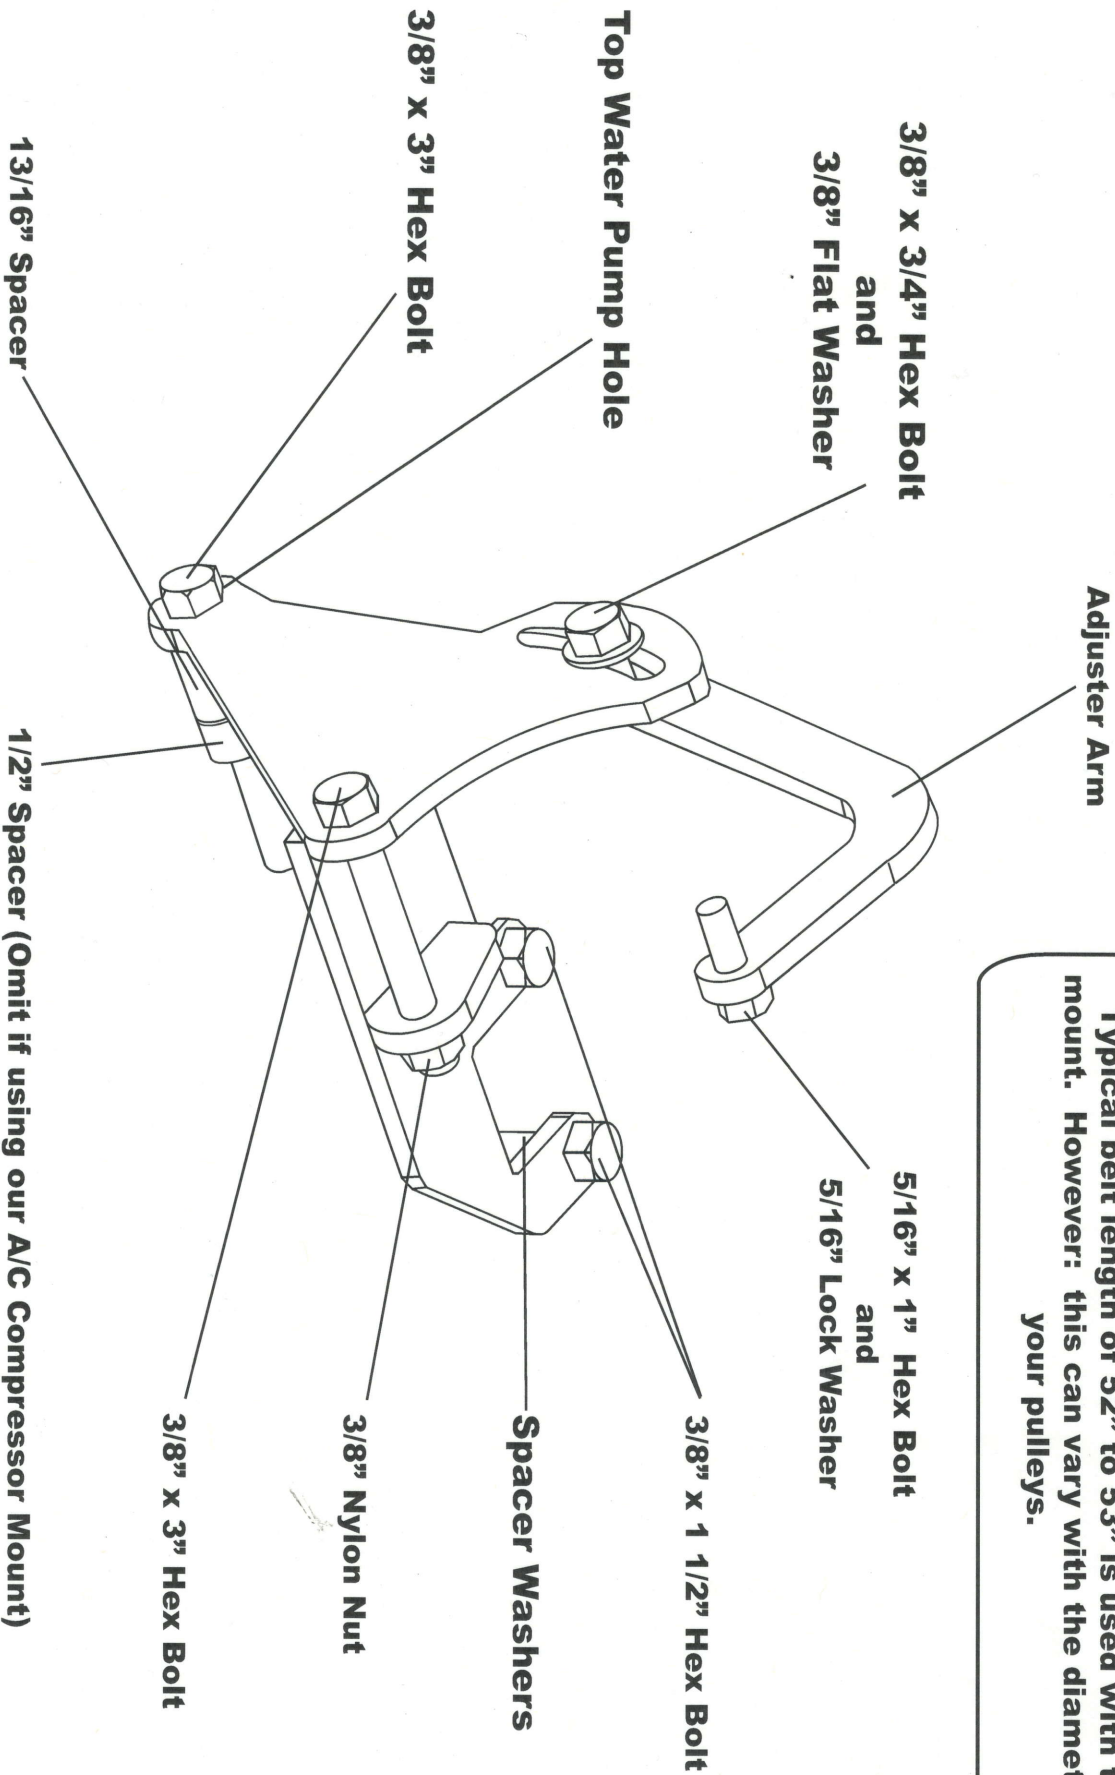

## Installation

Install bolts into water pump first. Next determine the number of spacer washers required between the bracket and intake manifold. This will vary with the thickness of various brands of manifolds. **START ALL MOUNTING BOLTS BEFORE TIGHTENING.**

Place adjuster arm behind opening in mount.

Typical belt length of 52" to 53" is used with this mount. However: this can vary with the diameter of your pulleys.