


COMPRESSOR MOUNT

**Big Block Chevy
Short Water Pump
Passenger Side**

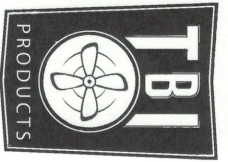

Installation

Determine if your heads have 3/8" or 7/16" bolt holes before installation. If the bolt holes are 7/16" you will need to enlarge the corresponding holes in the bracket. **START ALL MOUNTING BOLTS BEFORE TIGHTENING.**

