

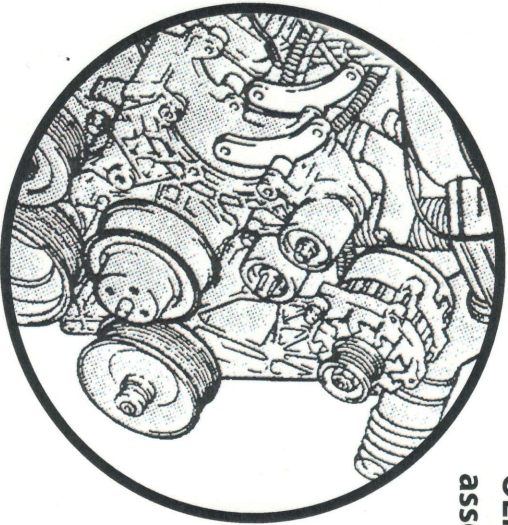


R-4 to Sanden 508 Series Compressor Bracket Kit

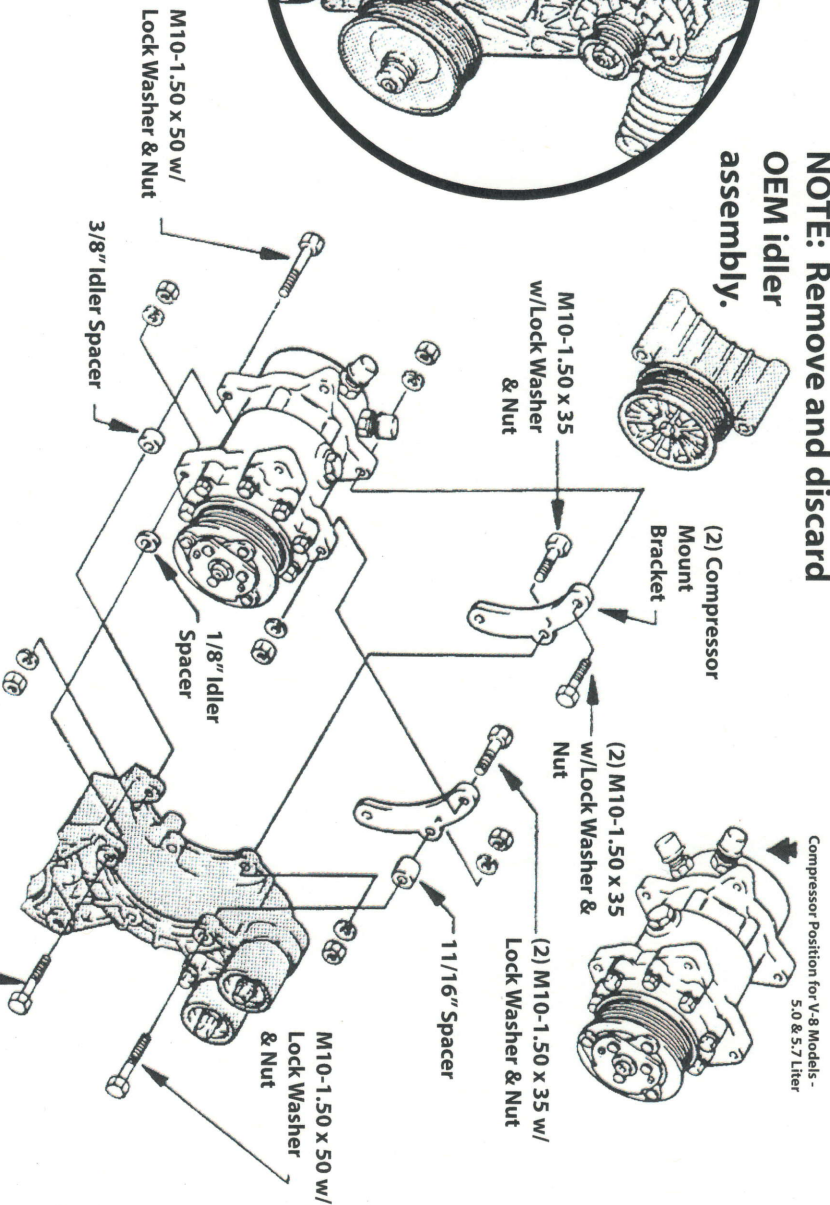

NOTE: Remove and discard OEM idler assembly.

NOTE: Remove and discard OEM Air Pump assembly.

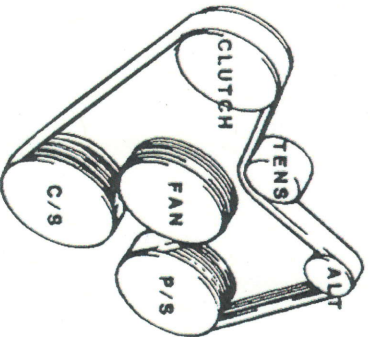

**Compressor Drive Belt:
We recommend using Goodyear Gaterback
4060955**

NOTE: Use a 508 Sanden series compressor (or equivalent) with a 7 groove Poly-V clutch.

IMPORTANT: Align 6 groove Poly-V belt with rear