




Enjoy Your Drive Tour With TBI  
www.tbiproducs.com

# YORK TO SANDEN COMPRESSOR MOUNT

## Converts York to Sanden SD508 or Selttec TM15HD

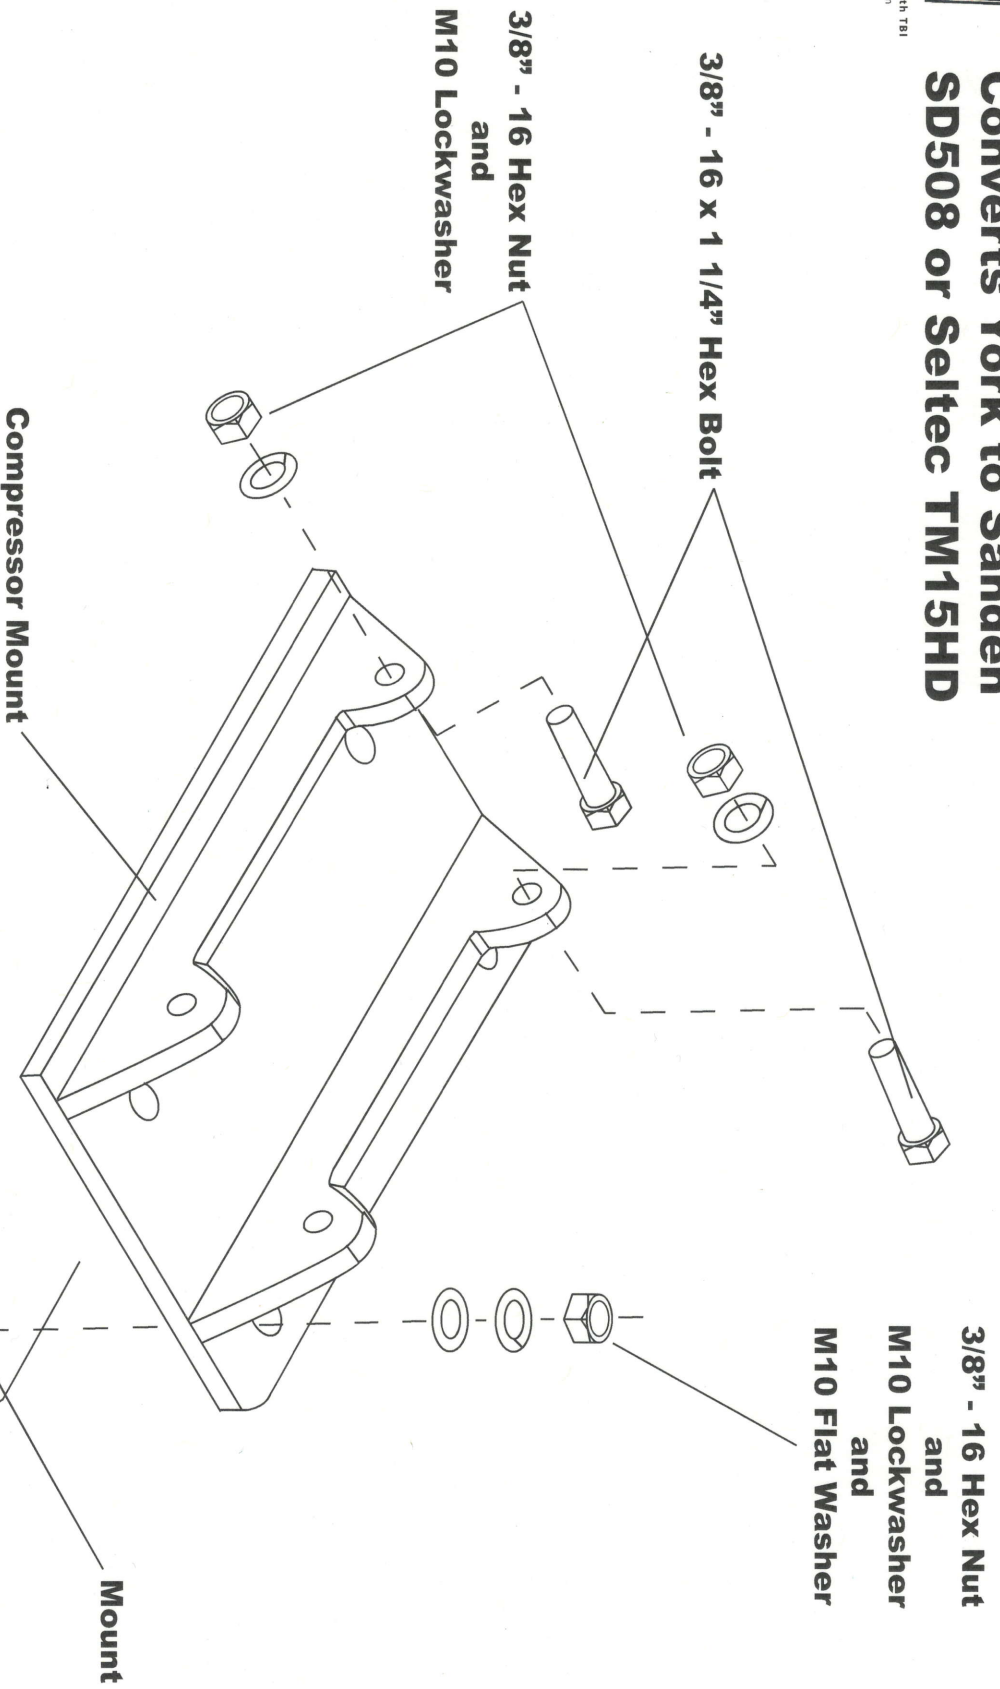

**Installation**  
Install bolts into mount first. Next install bolts into compressor. **START ALL MOUNTING BOLTS BEFORE TIGHTENING.**